

## Trakka Accessories (1)

Part No. TJ5250 to TJ5280



### TJ5250 Trakka Base

Fits under Trakka Rail., slides. Lock Wheel rotates counter-clockwise to lock in position, to release, rotate clockwise 1/2 turn. Also allows rail to slide extra length



### TJ5260 Rail Joiner

Fits into internal profile under alloy rail

Precision milled for exact seamless fit

Tighten screws firm, do not over tighten

### TJ5280 Suction Plate

Use only on clean non-ferros alloys. Locates under Trakka Magnet Base, operate by rotating caps clockwise until click-lock. Release by turning caps counter-clockwise to stop. Not suited for use on vertical or uneven surfaces

